



ELECTRICAL CONNECTION

GLIDE WITHOUT BACKLIGHT

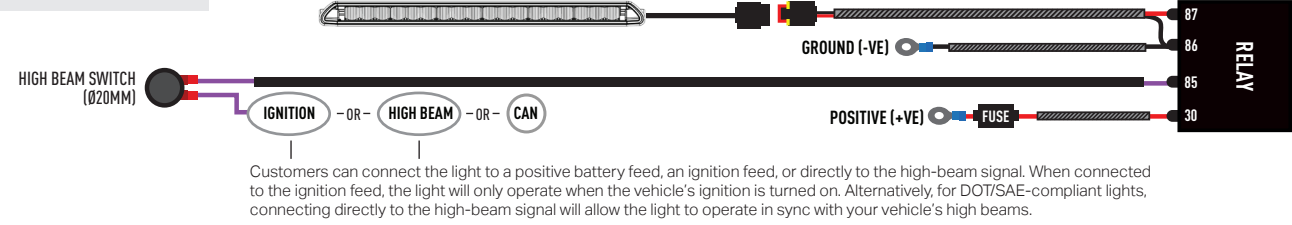

LINEAR-18 ELITE / GLIDE WITH BACKLIGHT

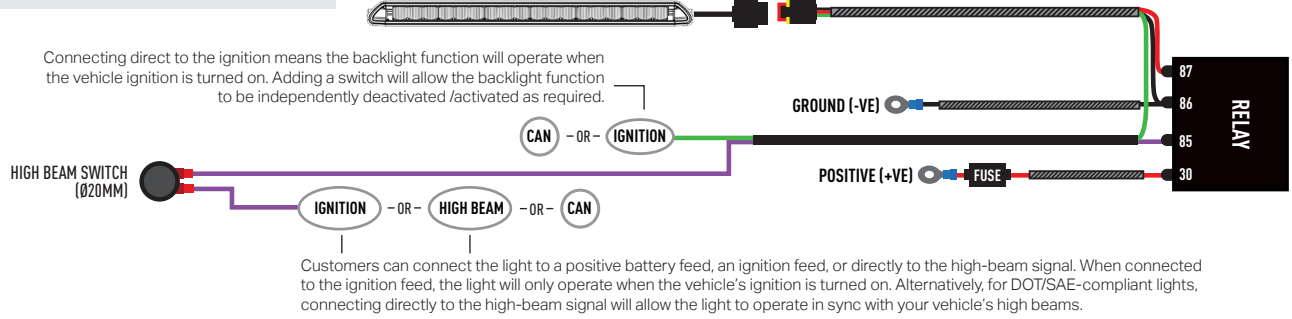

LINEAR-18 ELITE+ / LINEAR-18 ELITE I-LBA

Please refer to the instructions that are included with the lamp.

CANBUS INTEGRATION

(FOR DOT/SAE LIGHTS ONLY - SOLD SEPERATELY)

For vehicles where it is not possible to locate a 12V high beam signal, it will be necessary to take the high beam signal from the vehicle's CAN system. For connection options please visit the Triple-R Lights' website, or contact your nearest dealer.



Discover more about our CANNY CAN products - Scan the QR code to watch on our YouTube channel.

DOT / SAE COMPLIANCE

Please visit the lamps' product page on our website at www.triple-r-lights.com to view the DOT / SAE compliance test reports.



TOYOTA TUNDRA TRD PRO
(2022+) GRILLE KIT
FITTING INSTRUCTIONS



WWW.TRIPLE-R-LIGHTS.COM

We appreciate your purchase of a Triple-R Lights' product, and value your feedback. If you would like to leave feedback on your Triple-R experience, please head to the relevant product page on our website www.triple-r-lights.com.

technical@triple-r-lights.com

Triple-R Lights LLC, 600 North Bullard Avenue,
Suite 6, Goodyear, AZ 85338
UNITED STATES

UK BUILT | US DRIVEN /TRIPLERLIGHTS


WHAT'S INCLUDED

- 2x Grille Mounting Brackets
- Anti-Theft Fasteners & Key
- Fitting Instructions

Additionally - Kit Includes:


- 1x Linear-18 / Glide LED Lightbar
- 1x One-Lamp Wiring Kit

TOOLS REQUIRED

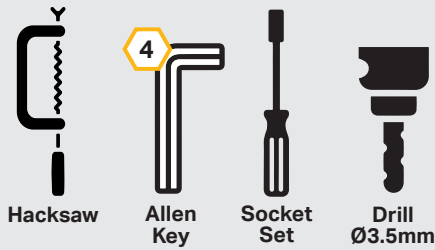


TORQUE VALUES

The code is written on the inside of each bracket (see example).

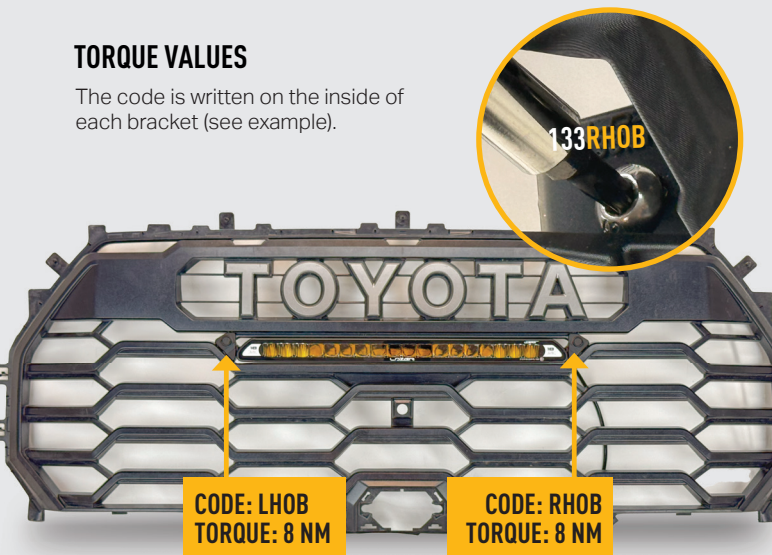

INSTALLATION PROCESS - Linear-18 shown for illustration purposes. Install should be completed with the grille left on the vehicle.

1

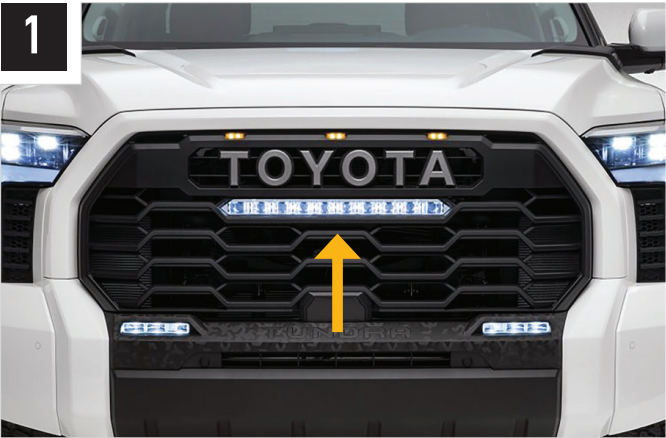

OE Manufacturer Lightbar will need to be removed.

Follow the OE Manufactures guidelines on how to do this.

2



Attach the brackets to each end of the lightbar (Max 8NM).

Please use a thread seal compound (i.e. Loctite 222) to protect the lamp fastener from binding over time.

3



Insert the lightbar into the grille in place of the OE unit, making sure it clicks securely into position.

4



Drill a 3.5mm hole through the screw hole of the brackets.

5



Using the supplied anti-theft screws, secure the lightbar to the grille (x1 each side of lamp).

6



Hide the screws using the supplied screw caps.